


Quick Connector and Jumper Reference

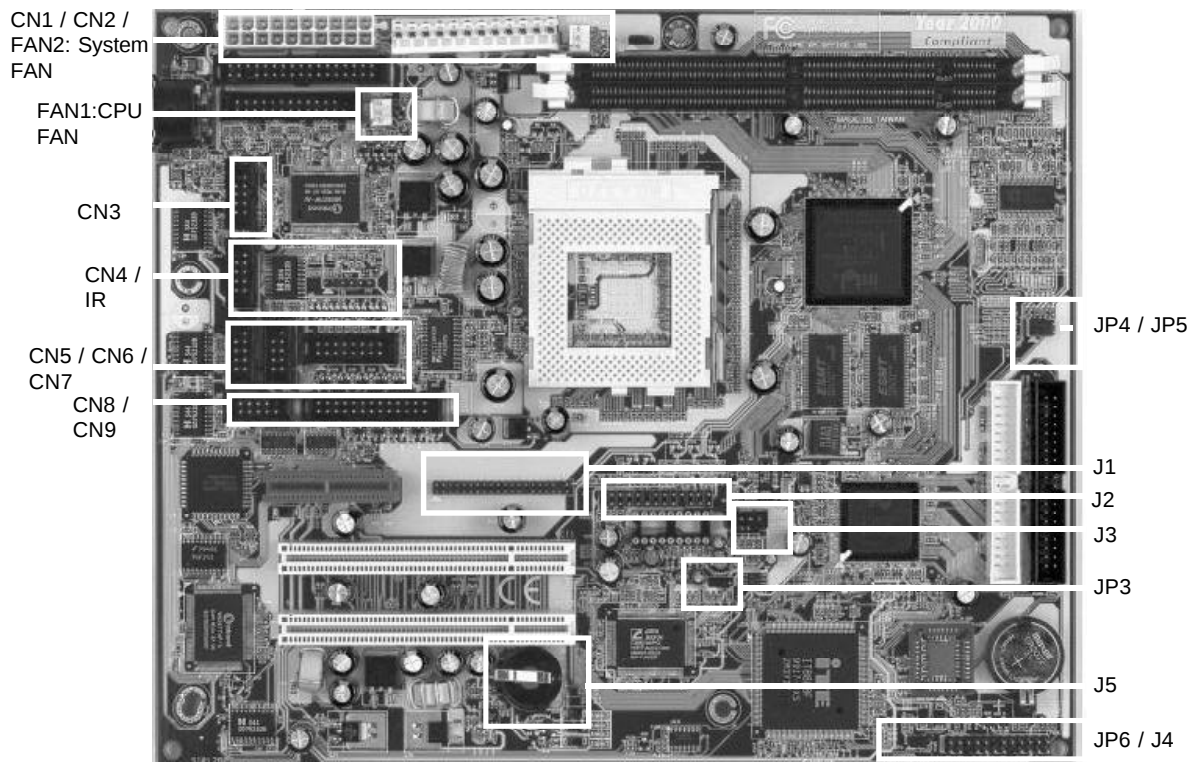

Jumper & Connector No.	Function
JP3	Onboard Audio Enable/Disable
JP4/JP5	CPU Bus External Frequency
JP6	Clear CMOS Data
J1	LTI Header
J2	Audio/VGA Header
J3	CD-ROM Audio-in Connector
J4	Power Indicator LED Connector
	System Reset Switch Connector
	Speaker Connector
	IDE Activity LED Connector
J5	Over-Ride Power Button
	Dallas Key (i Button)
FAN1/FAN2	CPU/System Cooling Fan Connector
IR	Infrared Connector
CN1	ATX Power Supply Connector
CN2	AT Power Supply Connector
CN3	USB Connector
CN4	COM 1 port
CN5	COM 4 port
CN6	COM 2 port
CN7	Fun World I/O port (15-pin)
CN8	COM 3 port
CN9	Fun World I/O port (25-pin)

JP3: Onboard Audio Enable/Disable

1-2 Enable (Default)
2-3 Disable

JP4/JP5: CPU External Clock Frequency


	JP4	JP5
Auto	1 ~ 2	1 ~ 2
66 MHz	2 ~ 3	2 ~ 3
100MHz	Open	2 ~ 3
133MHz	Open	Open

JP6: CMOS Clear


1-2 Normal (Default)
2-3 Clear CMOS

J3: CD_ROM Audio IN

J4: Front Panel Header

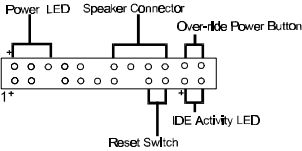

 FAN1/FAN2: CPU/System cooling FAN Connector



IR: Infrared Connector

